

Motronic MA2.4

821: Hall sensor 1, no signal - this fault will always occur if engine not running or engine not cranked before reading Fault codes.

The fault is currently present.

This fault occurred 0 times.

368: Lambda-Control, Lower Adaptation limit reached

The fault is not present now.

This fault occurred 54 times.

901: Hall sensor 2, no signal - this fault will always occur if engine not running or engine not cranked before reading Fault codes.

The fault is currently present.

This fault occurred 0 times.